

PLEASE READ THE INSTRUCTIONS BEFORE FITTING THE KIT

If you have a problem, however small, call our Technical Department.

Tel:- 01925 636950. Fax:- 01925 243111. Mon - Thurs 8.30 - 5pm.

- 1 Remove the complete air box assembly.
- 2 Remove the metal / rubber radiused entry spacer from the air box. Use a screwdriver to lever off the metal section first, then the rubber section.
- 3 Fit the two sections together and fit to the throttle body using the three studs and nuts. As a precaution use a **small** amount of loctite on the threads.
- 4 Fit the large plastic pipe 2cm into the hose that is attached to the cold start unit. It may be necessary to twist the unit to help line up the hose to fit into the filter base. **Drawing A.**
- 5 Remove the nut, then the plastic clip attached to the hose, allowing the breather hose to move back. Fit the small plastic pipe 2cm into the hose. **Drawing B.**
- 6 **Carefully** fit the filter to the oval intake spacer, keeping it square on. Fit the clip with the adjuster screw on either of the two longer sides of the filter flange. The two pipes can now be fitted into the holes in the filter base.
- 7 **Cold air system**
Cut away the section of plastic shown in **Drawing C**, this will give the access to the grille. **Before fitting the rubber hose** make sure the spring retaining clip on the radiator hose is in the **correct position** for the new air hose to sit on. Move the clip to the position shown in **Drawing D**. You may have to remove the clip, turn it round 180, and refit to allow the air hose to sit correctly on the section of the hose clip. Secure with a plastic tie around the radiator hose. The round end of the hose should face the air filter. **Drawing E.**
NOTE: The cold air pipe may slip down if incorrectly fitted.
- 8 **Tuning**
No adjustments are required.
- 9 **Filter Maintenance.**
Under normal conditions clean and reoil the filter at approx. 40,000 miles/65,000 km. **Use only K&N cleaner and oil** and follow the instructions carefully.

K&N filters are pre oiled ready to fit.


This Kit Should Contain :-

- | | |
|---|--|
| <ul style="list-style-type: none"> 1 x Air Filter 1 x Rubber cold air hose. 1 x Instruction sheet. 1 x Instruction pack:- <ul style="list-style-type: none"> 1 x Filter maintenance sheet. 1 x K&N window sticker. 1 x Million mile warranty card. 1 x Leaflet | <ul style="list-style-type: none"> 1 x Fixing kit containing :- <ul style="list-style-type: none"> 1 x Plastic cable tie (14" long). 1 x Small plastic tube 16mm O/D. 1 x Small plastic tube 20mm O/D. 1 x Hose Clip #72 |
|---|--|


The advantages of K&N's cold air intake system

Cooler air, being denser, will show positive improvements in power over filter systems that draw hot air from the engine bay.



Drawing A

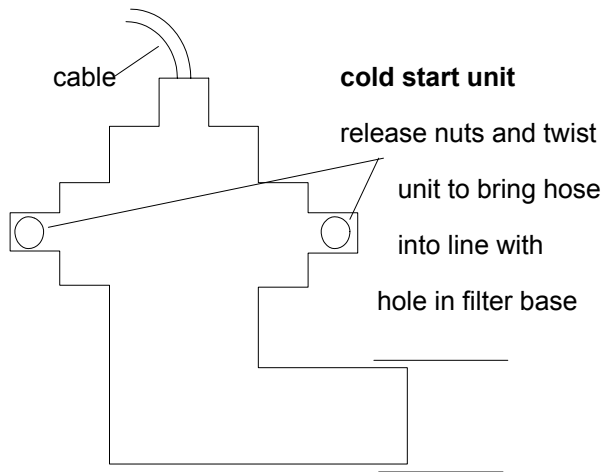


Drawing B

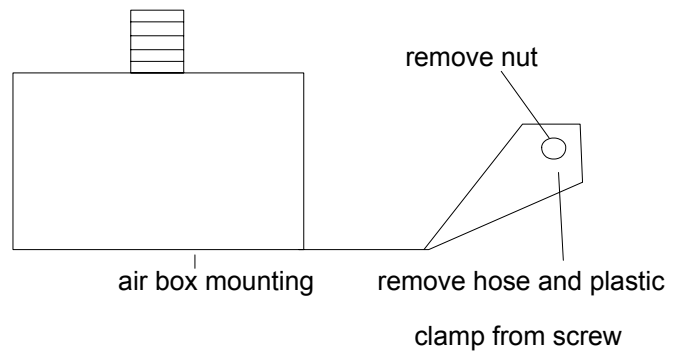

Drawing C

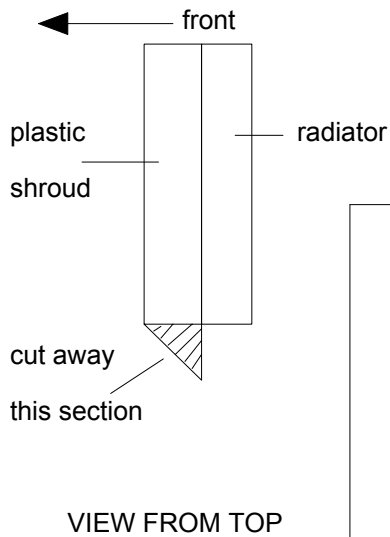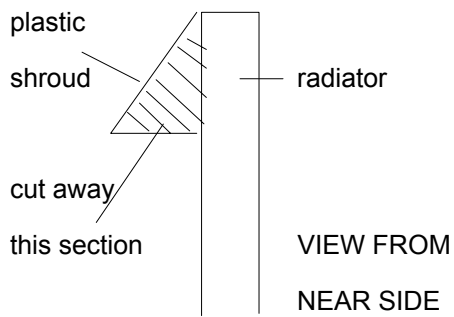

Drawing D

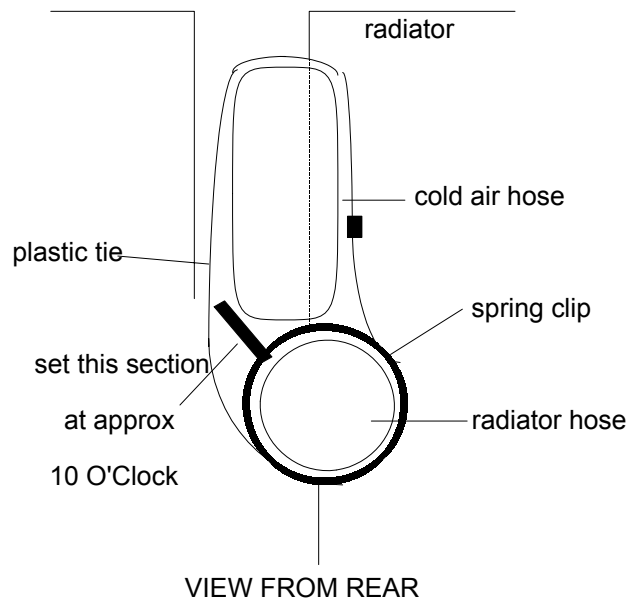

Drawing E

