


PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE FITTING THIS KIT

If you have a problem, however small, call our Technical Department

Tel:- 01925 636950. Fax:- 01925 243111. Mon - Thurs 8.30 - 5pm.

Drawing A

- ① Remove the air box lid
- ② Remove the air box from the cover leaving all of the pipes in place.
- ③ Completely remove the APC hose which goes on the air box base.

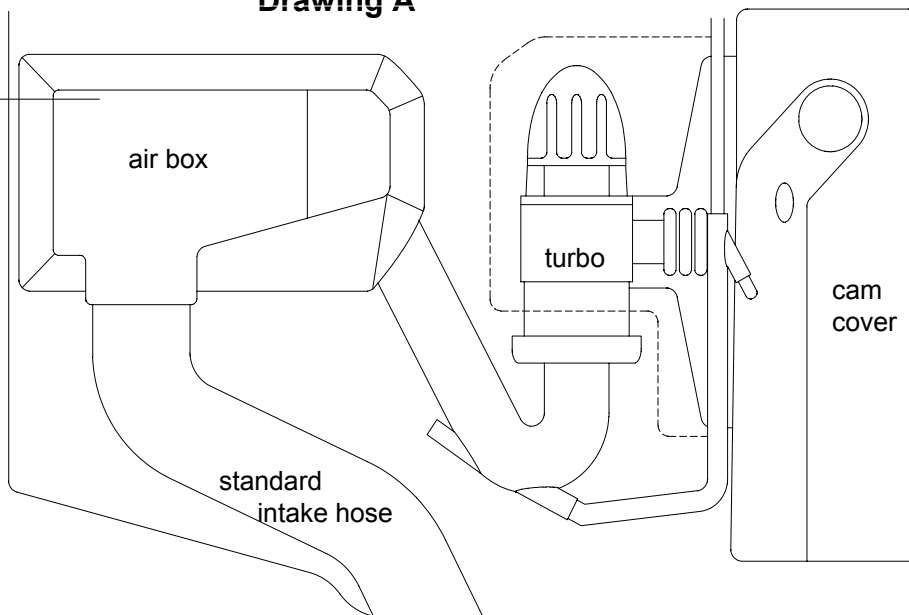


Drawing B

- ③ Slide the smaller tube half way into the new intake hose and firmly tighten the clip.
- ④ Fit the air filter onto the smaller tube up to the step in the filter base. Do not push in beyond the step as this will affect air flow. Tighten the clip until the filter just turns, then give the clip one full turn, (360 degrees) no more. **Don't overtighten the clip**
- ② Slide the new intake hose onto the new larger tube as shown and firmly tighten the hose clip supplied.
- ① Push the larger of the two tubes supplied in the kit halfway into the standard hose, and firmly tighten the original hose clip

- ⑥ Undo the 10mm nut in the base of the air box. Fit the bracket supplied onto the stud and replace the 10mm nut. Using the M6 nut and spring washer in the kit attach the end of the filter to the bracket and firmly tighten the nut.

- ⑤ Fit the small piece of hose in the kit onto the APC valve from where the old one was removed and push the other end into the hole in the base of the filter.

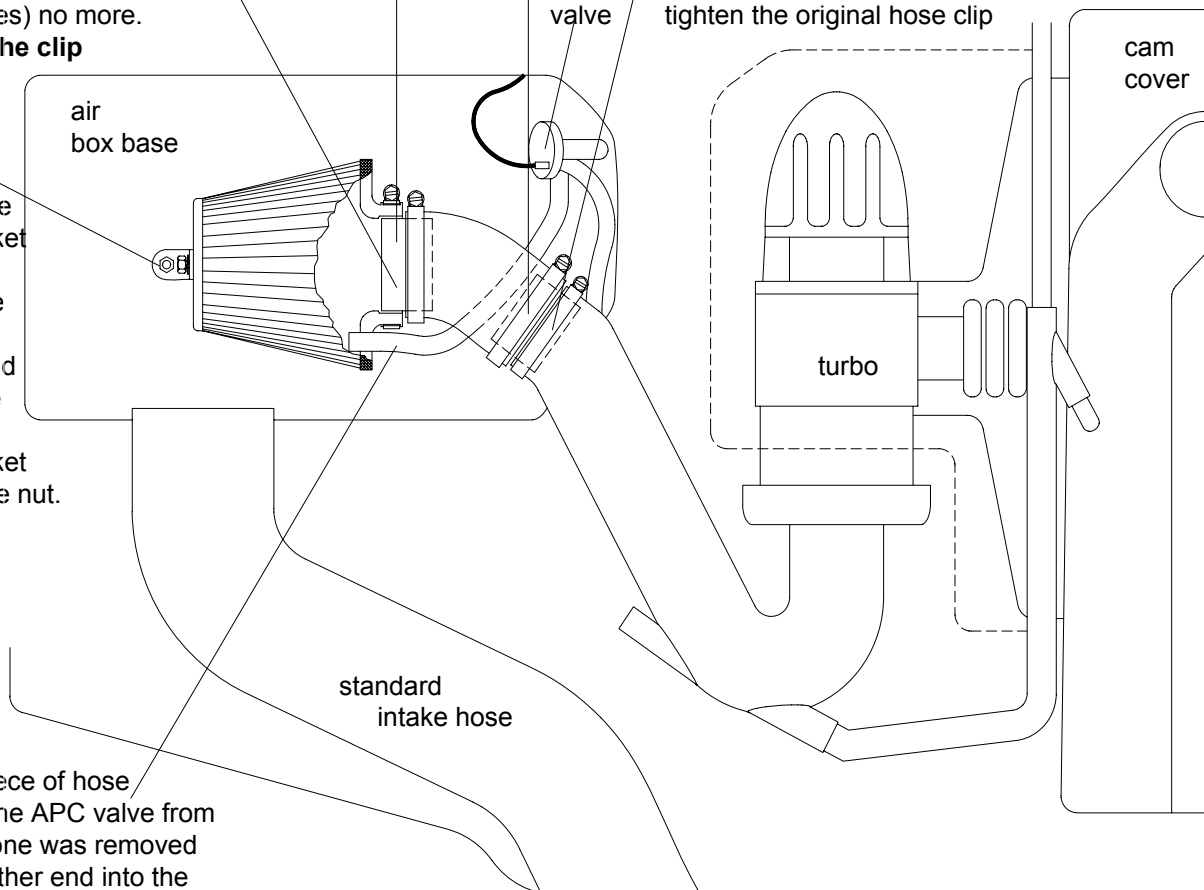

Tuning.**CAT. Cars** No adjustments required

An increase in fuel mixture may be required if further modifications are carried out.

Filter Maintenance.

Under normal conditions clean and reoil the filter at approx. 40,000 miles / 65,000km.

Use only K&N cleaner and oil and follow the instructions carefully.**K&N filters are pre-oiled ready to fit****The advantage of K&N's cold air intake system.**

Cooler air being denser, will show positive improvements in power over filter systems that draw hot air from the engine bay.

This Kit Should Contain:

- 1 x Air Filter
- 1 x Hose Clip #48
- 1 x Rubber Intake Hose
- 1 x APC Valve Hose
- 1 x Bracket
- 1 x Large Metal Tube
- 1 x Small Metal Tube
- 1 x Instruction Sheet
- 1 x Instruction Pack :-
 - 1 x K&N Window Sticker
 - 1 x Filter Maintenance Sheet
 - 1 x Million Mile Warranty
 - 1 x Leaflet
- 1 x Fixing Kit :-
 - 1 x M6 Nut
 - 1 x 6mm Spring Washer
 - 1 x #40 Hose clip
 - 1 x #44 Hose clip

FITTING YOUR OWN 57i KIT

If not **it is essential** that the person fitting the kit (e.g. mechanic) **carefully follows these particular instructions** even if he has fitted K&N kits before. This will save you both time and money. kits incorrectly fitted may show a loss in performance e.g. the positioning of the essential cold air hose, (flexi expandable and rubber hoses are used).

A final check under the bonnet, by yourself with the instructions, would seem sensible