

PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE FITTING THIS KIT

If you have a problem, however small, call our Technical Department

Tel:- 01925 636950. Fax:- 01925 243111. Mon to Thurs 8.30 - 5pm.

Drawing A

① Remove the air box.


⑥ Using a medium plastic tie attach the hot spot valve vacuum pipe to the new bracket.

② Using a medium plastic tie attach the MAP sensor to the air box mounting point.

④ Bolt the new metal tube to the new bracket using the M6 nut and spring washer then slide the standard intake on to the metal tube and secure using the new hose clip. Then fit the filter onto the metal tube up to the step in the filter base. Do not push in beyond the step as this will affect air flow. Tighten the clip until the filter just turns, rotate the filter until the K&N logo is straight then give the clip one full turn (360 degrees) **no more.** **Don't overtighten the clip.**

③ Mount the new bracket to the rear engine mounting bolt loosely.


⑤ Firmly tighten the engine bolt.

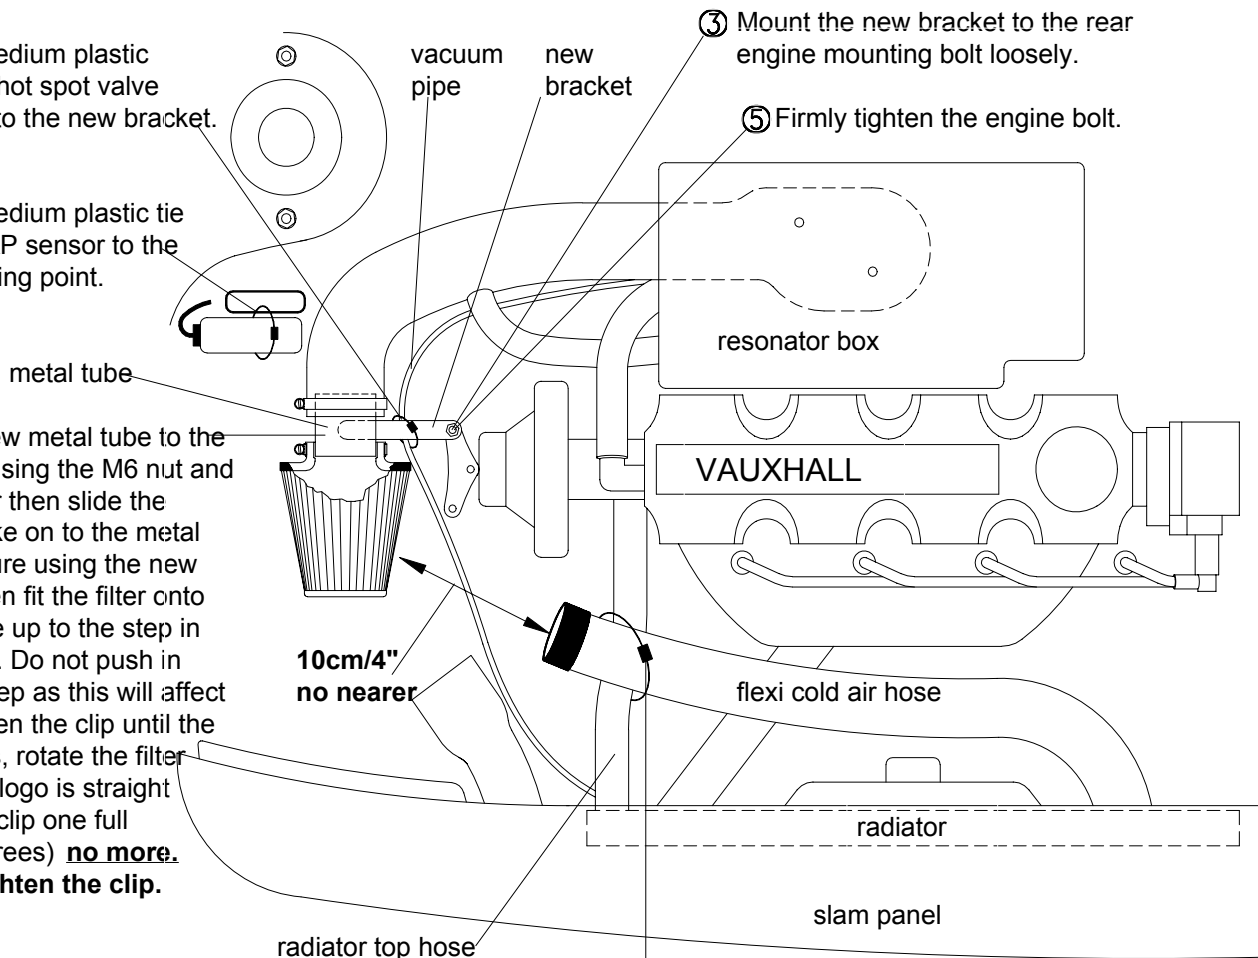

TOP VIEW

⑦ Carefully lengthen the flexi cold air hose to 94cm/37" and feed as shown over the radiator and down to the lower grille as shown in drawing B. Attach the upper section of the hose to the radiator top hose with a long plastic tie so that it ends up 10cm/4" away from the filter (no nearer).

Drawing B

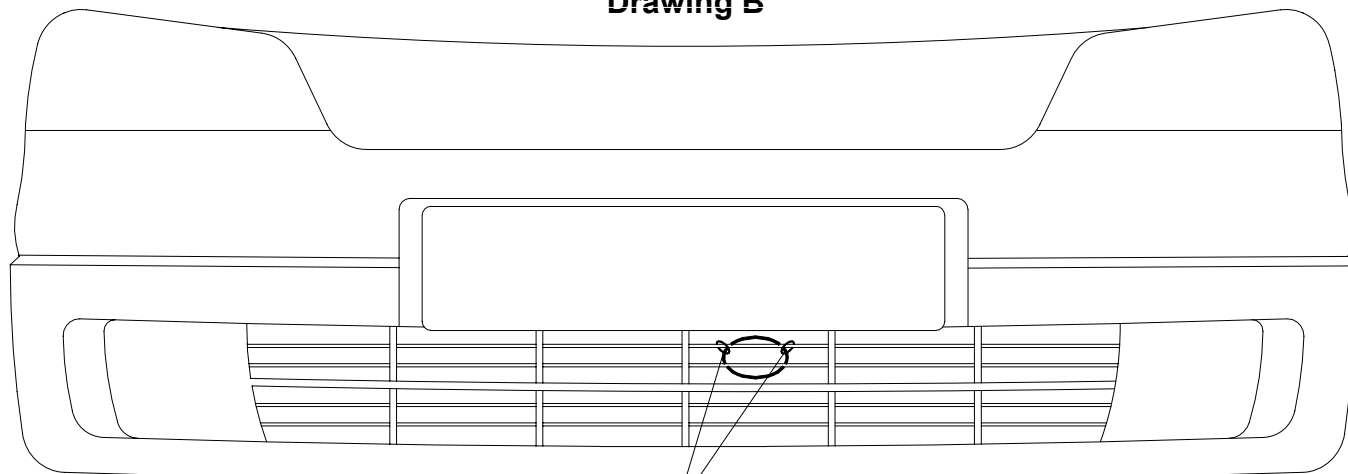

FRONT VIEW

Ovalise this end of the cold air hose and attach it to the lower grille with the two medium plastic ties.

Tuning.**CAT. Cars** No adjustments required

An increase in fuel mixture may be required if further modifications are carried out.

Filter Maintenance.

Under normal conditions clean and reoil the filter at approx. 40,000 miles / 65,000km.

Use only K&N cleaner and oil and follow the instructions carefully.**K&N filters are pre-oiled ready to fit****The advantage of K&N's cold air intake system.**

Cooler air being denser, will show positive improvements in power

This Kit Should Contain:

FITTING YOUR OWN 57i KIT

- 1 x Air Filter
- 1 x Hose Clip #44
- 1 x Bracket
- 1 x Metal Intake Tube
- 1 x Cold Air Hose Assembly
- 1 x Instruction Sheet
- 1 x Instruction Pack :-
 - 1 x Filter Maintenance Sheet
 - 1 x K&N window sticker
 - 1 x Million Mile Warranty
 - 1 x Leaflet
- 1 x Fixing Kit :-
 - 1 x Hose Clip size #40
 - 1 x M6 Nut
 - 1 x 6mm Spring Washer
 - 1 x Long Plastic Tie
 - 4 x Medium Plastic Ties

If not **it is essential** that the person fitting the kit (e.g. mechanic) **carefully follows these particular instructions** even if he has fitted K&N kits before. This will save you both time and money. kits incorrectly fitted may show a loss in performance e.g. the positioning of the essential cold air hose, (flexi expandable and rubber hoses are used).

A final check under the bonnet, by yourself with the instructions, would seem sensible