

Part Number 57-0442 INSTALLATION INSTRUCTIONS

Honda Civic Type-R 2.0L 16v 4 Cyl 197Bhp April 2001 on...

1. Unclip & remove the flexi intake pipe from the air box lid and breather hose from the cam cover. (Fig. 1)
2. Unscrew and remove the air box lid from the vehicle. (Fig.2)
3. Undo the 2 securing screws and nuts from the air box base. Carefully remove the complete air box base from the vehicle. (Fig.3)
4. Unbolt & remove the air intake bracket from the slam panel. (Fig. 4)
5. Fit the flexi cold air hose supplied into the rubber scoop supplied. Fit the scoop over the radiator under the slam panel into the front grill and secure in place using the plastic tie supplied. (Fig.5)
6. Assemble the rubber elbow, stepped adaptor, silicon hose & plastic elbow. Fit the rubber elbow onto the cam cover breather pipe and secure using the original hose clip. (Fig. 6)
7. Assemble the saddle bracket to the mounting bracket using the hardware supplied. (Fig. 6)
8. Fit the saddle bracket assembly to the air box mounting using the allen head bolt and small washer supplied. (Fig. 7)
9. Fit the metal tube halfway into the original intake hose and secure using the original hose clip. (Fig. 8)
10. Fit the rubber filter adaptor onto the metal tube and rest it in the saddle bracket, it may be necessary to remove the rubber lug from the original flexi hose. (Fig. 9)
11. Fit the #72 hose clamp around the saddle bracket
12. Fit the air filter through the hose clamp on to the rubber adaptor and firmly tighten the hose clip. (Fig. 10)
13. Fit the plastic elbow into the hole in the air filter base. (Fig. 11)
14. Position the end of the flexi cold air hose towards the air filter to finish approximately 10cm/4" away secure in position using the plastic tie supplied. (Fig. 12)
15. Carry out a final height alignment check of the kit fitment. Installation is now complete.

Parts list:

- 1 x Chrome Lid Air Filter
- 1 x Rubber Adaptor.
- 1 x #72 Hose Clamp.
- 1 x Rubber Scoop.
- 1 x Metal Tube
- 1 x Cold Air Hose Assembly.
- 1 x 10mm Silicon Hose.
- 1 x Literature Pack.

Fixing kit:

- 1 x Rubber Elbow.
- 1 x Plastic Stepped Adaptor.
- 1 x Plastic Elbow.
- 1 x Metal Bracket.
- 2 x Plastic Ties.
- 1 x Saddle Bracket.
- 2 x Flat Metal Washers.
- 1 x Nylock Nut.
- 1 x Conical Washer.
- 1 x Tapered Screw.
- 1 x Allen Head Bolt.

WARNING: Before starting the engine carry out a final fitment check of the K&N performance kit. It will be necessary for all intake systems to be checked periodically for realignment, clearance and tightening of all connections. Failure to follow the above instructions or proper maintenance may void the warranty.



Fig. # 1



Fig. # 2



Fig. # 3



Fig. # 4



Fig. # 5



Fig. # 6



Fig. # 7



Fig. # 8



Fig. # 9



Fig. # 10

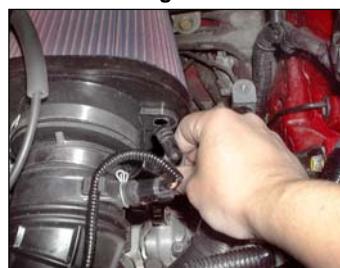


Fig. # 11



Fig. # 12