



INSTALLATION INSTRUCTIONS

Part Number E-2868

This filter fits: **See current catalog for applications**

FREE K&N DECAL** To register your warranty, please see us online at knfilters.com/register. **FREE K&N DECAL

Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter will last 1 million miles or more. This filter is a direct replacement for the stock air filter, and no modifications will be required. However the following procedures **MUST** be followed to ensure the proper fit and seal of the K&N *Filtercharger*[®].

1. Disconnect the two air intake tubes and breather hose from the airbox lid.
2. Remove the screws that fasten the airbox lid to the airbox base.
3. Remove the airbox lid from the vehicle then remove the dirty air filter.
4. Wipe out any dirt or dust that may be inside the air filter housing.
5. Install the K&N *FILTERCHARGER* onto the airbox lid by first applying gentle pressure to the two ends of the filter so that the filter will slip over the raised lip on the airbox lid. (See Fig 1).
6. Install the airbox lid with the K&N filter back into the airbox base making sure that the filter sits in the groove at the bottom of the airbox base. (See Fig 2).
7. Re-install the screws for the airbox lid and re-fasten the two air intake tubes and the breather hose.

THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.



Fig. 1

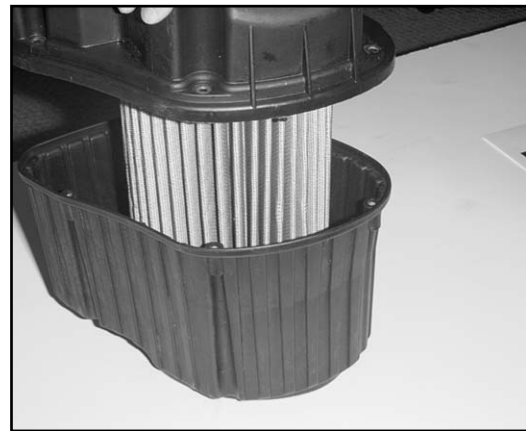


Fig. 2